

APPENDED LOSSES

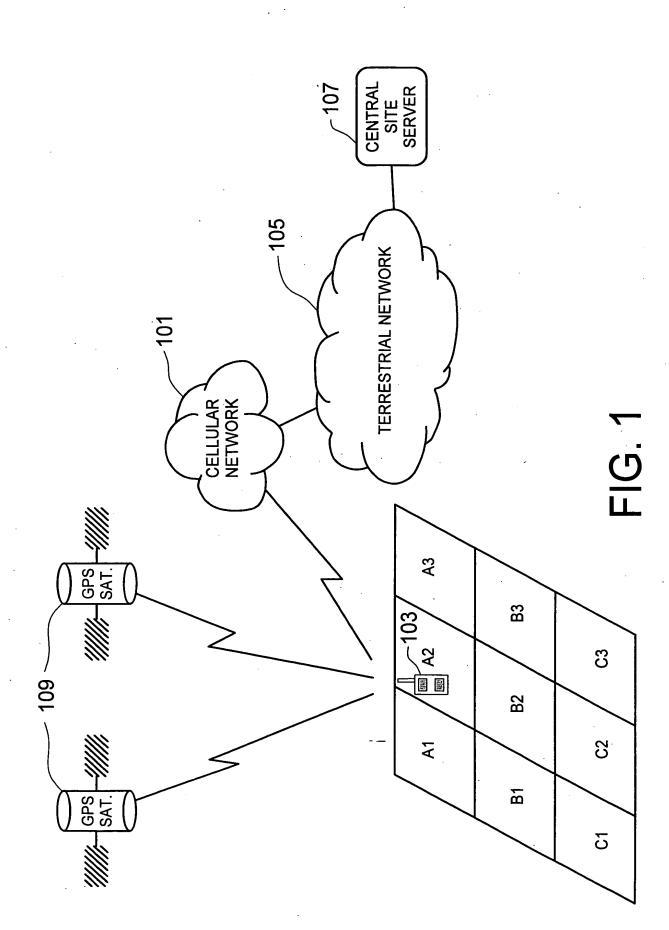

BY CLASS SUBCLASS

FIG. 2

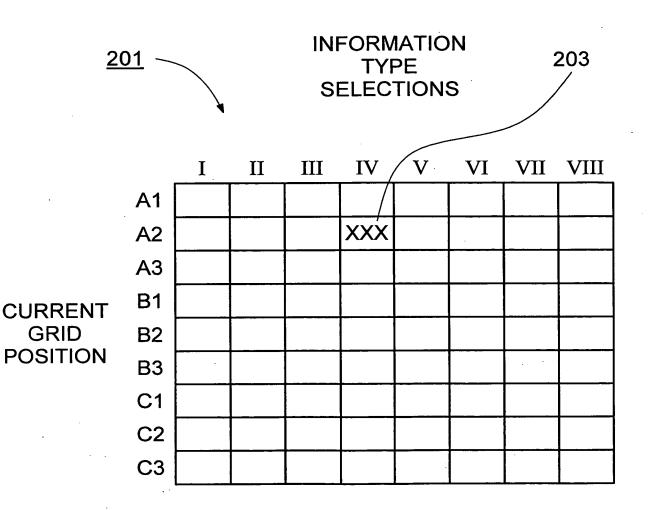

COLEGE CALEBAG

FIG. 3A

MOBILE UNIT 103

CENTRAL SITE SERVER 107

EXTERNAL GPS SWITCH: ENABLED POSITION REPORTING: DISABLED

INCOMING CONTENT: GOES TO SPEAKER & DTMF

RECEIVER

LOCAL DTMF: CONNECTED

TO SPEAKER

MICROPHONE: CONNECTED

TO RF MODULATOR

301. CONNECTION SET-UP

302. MENU OF OPTIONS

303. USER SELECTIONS FOLLOWED BY 'MENU' TONE

305. HIDDEN TONE SIGNALS 'END OF MENU' PHASE

304.STORE SELECTIONS

306. INCOMING CONTENT: **GOES TO DTMF** RECEIVER ONLY LOCAL DTMF: ISOLATED FROM **SPEAKER** MICROPHONE: DISCONNECTED

FROM RF

MODULATOR

307. ACKNOWLEDGE

308. REQUEST POSITION & SPECIFY REFRESH INTERVAL

309. INCOMING CONTENT: GOES TO SPEAKER ONLY POSITION REPORTING: **ENABLED**

310. RECEIVE/PROCESS **POSITION**

311. POSITION INFORMATION

312.(OPTIONAL) STORE **POSITION** 313.SELECT INFO CONTENT

314. INFORMATION CONTENT

315. REPEAT STEPS 310-314 IF NOT 'RETURN TO MENU' AND NOT 'CONNECTION TERMINATED'

	O.G. FIG.		
BY	CLASS	SUBCLASS	
DRAFTSMAN			

FIG. 3B

MOBILE UNIT 103

CENTRAL SITE SERVER 107

316. USER PRESSES 'MENU' KEY ON KEYPAD 413

> INCOMING CONTENT: GOES TO SPEAKER & DTMF RECEIVER

317 MOBILE UNIT SENDS
'RETURN TO MENU'
TONE TO CENTRAL SITE
SERVER

318. HIDDEN TONE SIGNALS 'RETURN TO MENU' PHASE

319. ACKNOWLEDGE

320. LOCAL DTMF:
 CONNECTED TO
 SPEAKER
 MICROPHONE:
 CONNECTED TO RF
 MODULATOR
 POSITION REPORTING:
 DISABLED

321. MENU OF OPTIONS

322. USER SELECTIONS FOLLOWED BY 'MENU' TONE


> 323.STORE SELECTIONS

324. HIDDEN TONE SIGNALS'
'END OF RETURN TO
MENU' PHASE

325. INCOMING CONTENT:
GOES TO SPEAKER
ONLY
LOCAL DTMF:
ISOLATED FROM
SPEAKER
MICROPHONE:
DISCONNECTED
FROM RF
MODULATOR
POSITION REPORTING:
RESUMED

326. GOTO 310

327. TERMINATE CONNECTION IF USER TERMINATES PHONE CALL COLTON COLTON

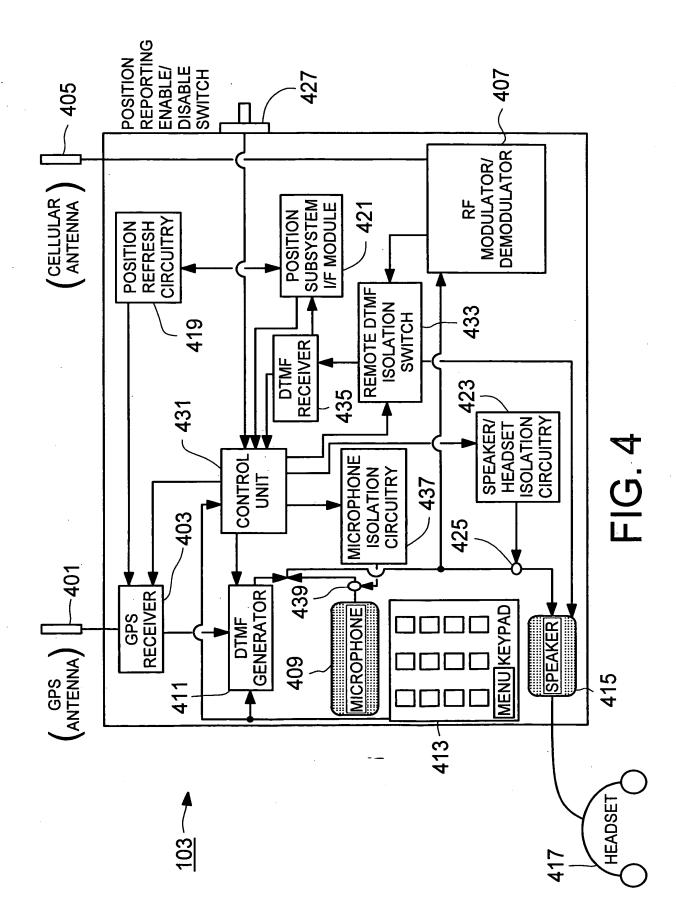

THE THE STATE OF THE STATE OF

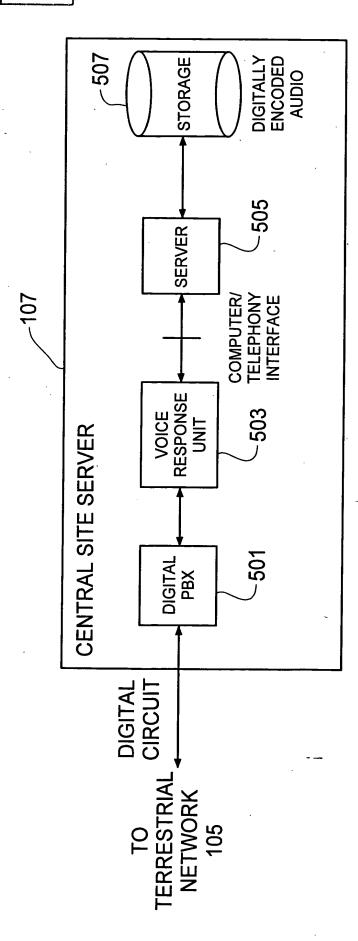


FIG. 5

APPROVED	O.G. FIG.		
ву,	CLASS	SUBCLASS	
DRAFTSMAN		•	

FIG. 6A

MOBILE UNIT 103

CENTRAL SITE SERVER 107

EXTERNAL GPS SWITCH: 601. CONNECTION SET-UP **ENABLED** POSITION REPORTING: 602. SECURE CONNECTION? DISABLED 603. YES -- (PRESS SECURE INCOMING PACKETS/ **BUTTON) CONTINUE. CONTENT: GO TO** SPEAKER OR CONTROL NO - GOTO STEP 609 UNIT MICROPHONE: 604. SERVER PUBLIC KEY CONNECTED TO MUX **CERTIFICATE** 605. MOBILE UNIT PUBLIC KEY CERTIFICATE, ['CHALLENGE'] PUBLIC KEY OF SERVER 606. [SECRET KEY, 'CHALLENGE'] PUBLIC KEY ENVELOPE 607. STORE SECRET KEY 608. ['CHALLENGE'] SECRET KEY 609. MENU OF OPTIONS 610. USER SELECTIONS FOLLOWED BY 'MENU' PACKET 611.STORE SELECTIONS 612. 'END OF MENU' PACKET 613. MICROPHONE: DISCONNECTED FROM MUX INCOMING PACKETS **GO TO POSITION** 614. ACKNOWLEDGE SUBSYSTEM 615. REQUEST POSITION & INTERFACE MODULE SPECIFY REFRESH INTERVAL 616. INCOMING PACKETS/ CONTENT: GO TO SPEAKER ONLY **POSITION REPORTING: ENABLED** 617. RECEIVE/PROCESS 618. POSITION INFORMATION **POSITION** 619.(OPTIONAL) STORE . POSITION 620.SELECT INFO CONTENT 621. INFORMATION CONTENT


622. REPEAT STEPS 617-621 IF NOT 'RETURN TO MENU' AND NOT 'CONNECTION TERMINATED'


APPROVED	Ú.G. FIG.		
Ye	CLASS	SUBCLASS	
DRAFTSMAN	1		

FIG. 6B

MOBILE UNIT 103

CENTRAL SITE SERVER 107

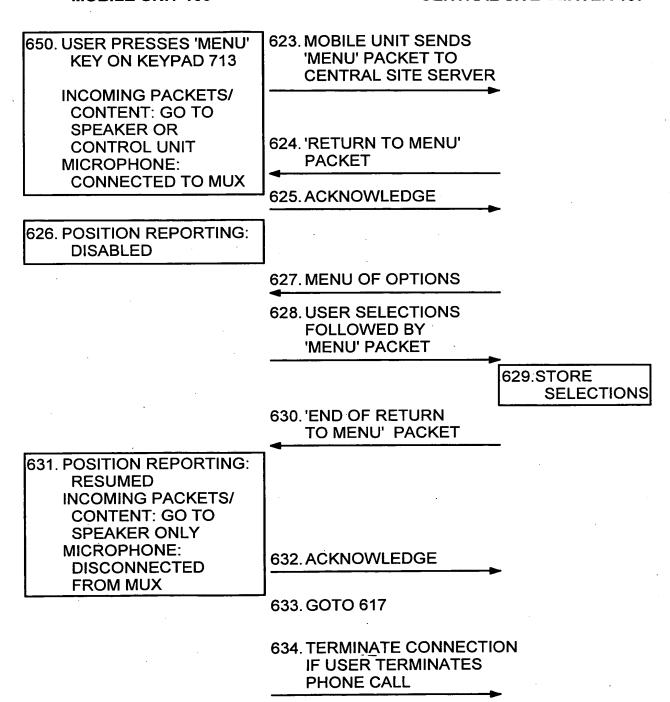

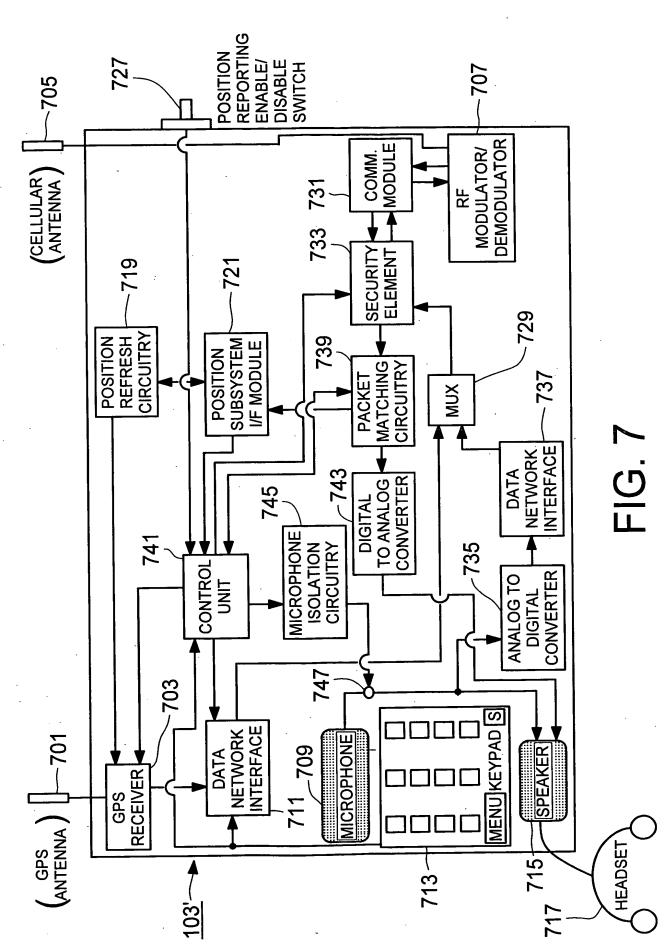

COLTED COLTED CO

APPROVED O.G. FIG.
CLASS SUBCLASS
DRAFTSMAN

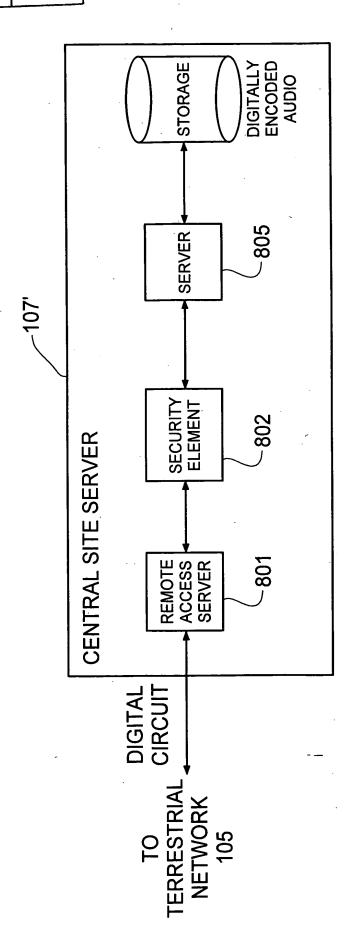


FIG. 8